




Produits Neptune

MILOS

LEFT DRAIN WITH SKIRT

Bathtub

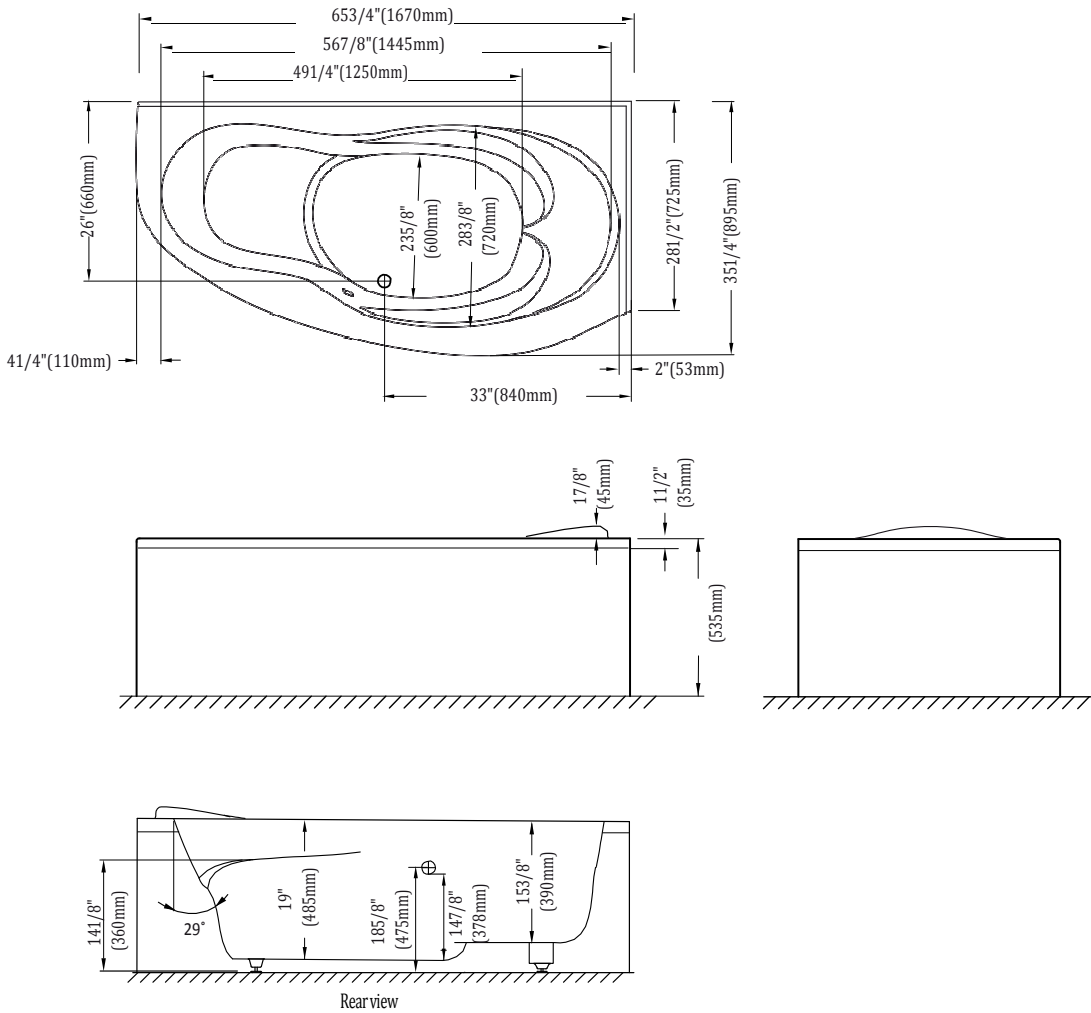

* A bathtub fitted with back jets can cause the pump to protrude by approximately 3" from the overall dimension.

** All dimensions are approximate and subject to change without notice. Please refer to the installation guide before beginning the installation




Produits Neptune

MILOS

LEFT DRAIN WITHOUT SKIRT

Bathtub

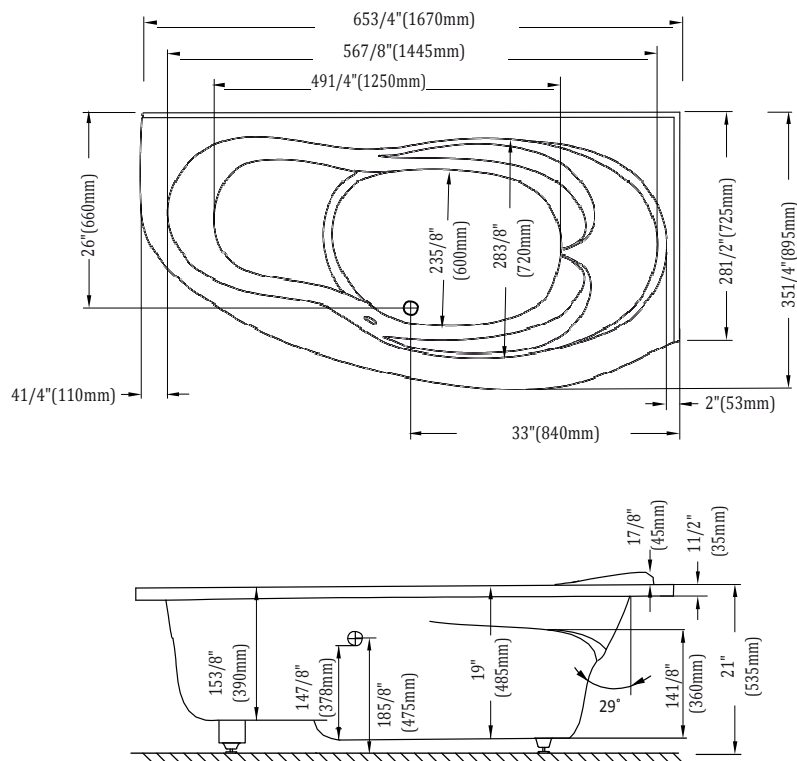

* A bathtub fitted with back jets can cause the pump to protrude by approximately 3" from the overall dimension.

** All dimensions are approximate and subject to change without notice. Please refer to the installation guide before beginning the installation




Produits Neptune

MILOS

RIGHT DRAIN WITH SKIRT

Bathtub

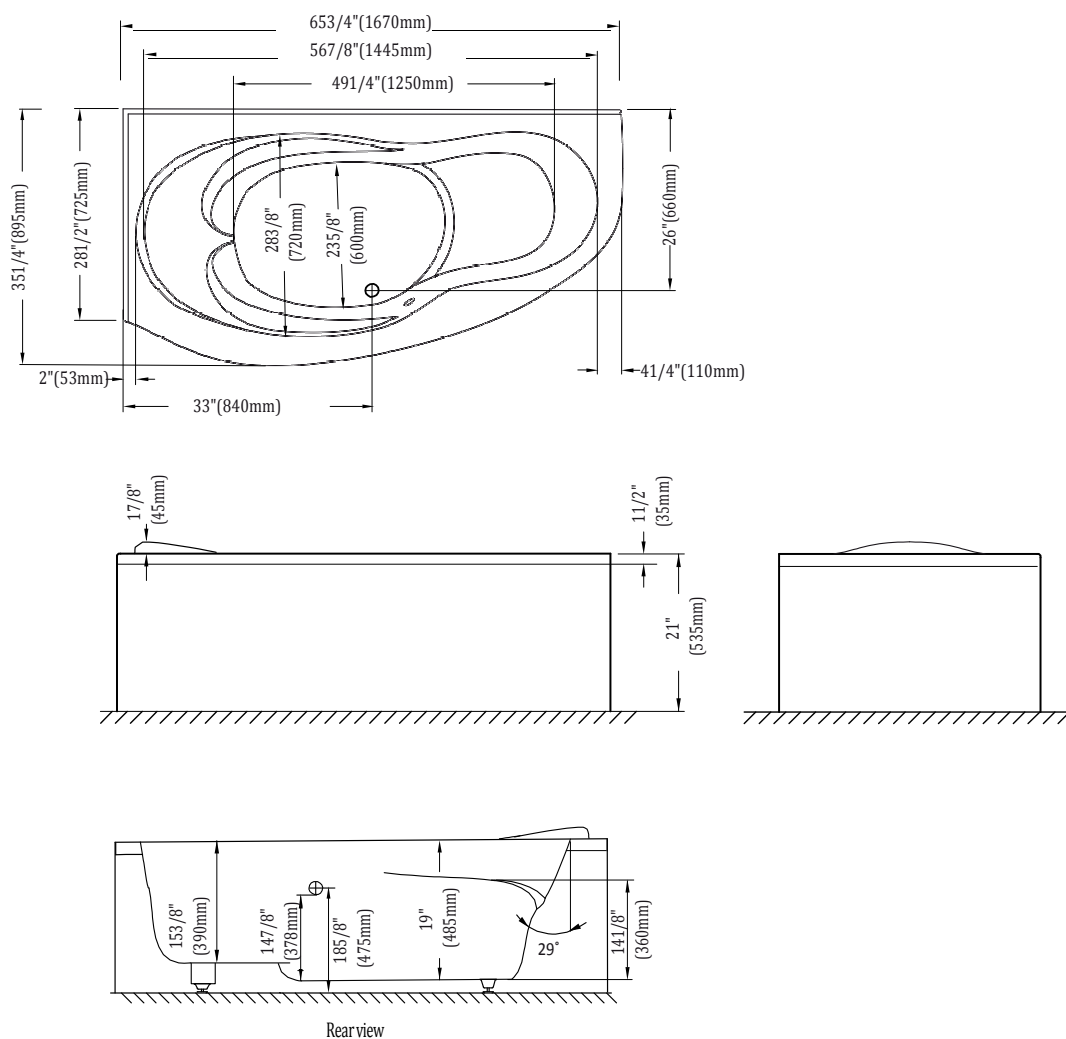

* A bathtub fitted with back jets can cause the pump to protrude by approximately 3" from the overall dimension.

** All dimensions are approximate and subject to change without notice. Please refer to the installation guide before beginning the installation




Produits Neptune

MILOS

RIGHT DRAIN WITHOUT SKIRT

Bathtub

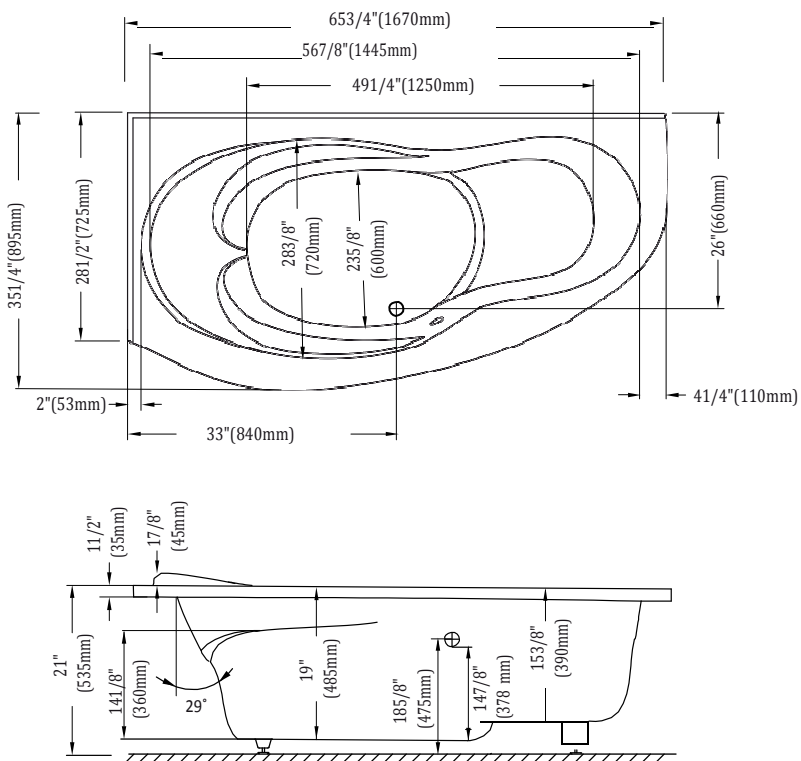

* A bathtub fitted with back jets can cause the pump to protrude by approximately 3" from the overall dimension.

** All dimensions are approximate and subject to change without notice. Please refer to the installation guide before beginning the installation



Produits Neptune

Milos skirt installation guide

Figure1


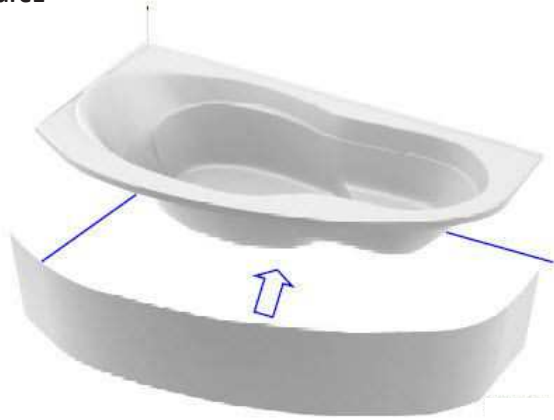


Figure2

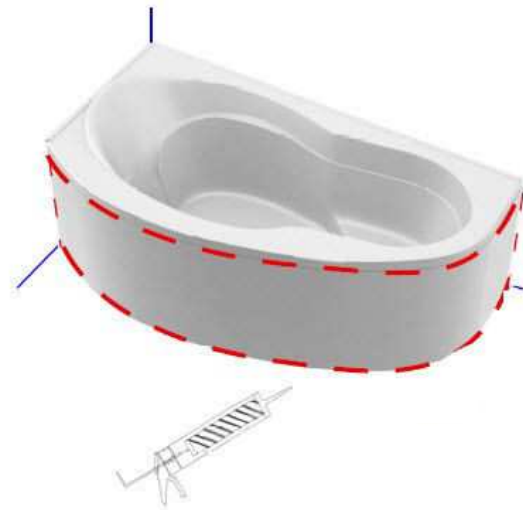

* The bath must be installed against finished walls

** The skirt is designed to be installed on your floor covering.

1. Make sure the walls and floor are level (use a self leveling compound if needed).
2. Set the bath in place.
3. Temporarily slide the skirt under the bath to determine the height required for installation.
4. Move the skirt to the side. Increase or decrease the height of the bath to match the skirt using the adjustable legs.
5. Revalidate the level of your bath to ensure proper drainage.
6. Repeat steps 3, 4 and 5 as required.
7. Complete the installation of the bath.
8. Place the skirt in position.
9. Affix the silicone to the periphery of the skirt (Figure2).
10. Allow 24 hours after installation before use.